



MOPAR®

Vehicle Remote Start System

Système de démarrage à distance de voiture

Owner's Manual
Guide de l'utilisateur

1024272

Rev. A

1/04

K6859219

Contents

Using the Remote Control Start Function	3
Starting Your Vehicle:	3
Entering the Vehicle While it is Running via Remote Start:	4
Service Mode:	4
System Maintenance	5
Changing the Remote Control Battery:	5

Warning:


To prevent accidental activation of your remote start system, it is recommended that the service mode be activated prior to servicing your vehicle. For instructions on activating the service mode, refer to page 4 in this manual.

Warning:

Do not remote start vehicle in an enclosed environment (i.e. closed garage). Prolonged operation of a motor vehicle in an enclosed environment can cause a harmful buildup of Carbon Monoxide. Carbon Monoxide is harmful to your health. Exposure to high levels of carbon monoxide can cause headaches, dizziness or in extreme cases unconsciousness and/or death.

Using the Remote Control Start Function

Your vehicle may be equipped with an Anti-Theft system. If so, your Mopar Remote Control Start system interfaces with this system, fully maintaining the level of security provided by the Anti-theft system.

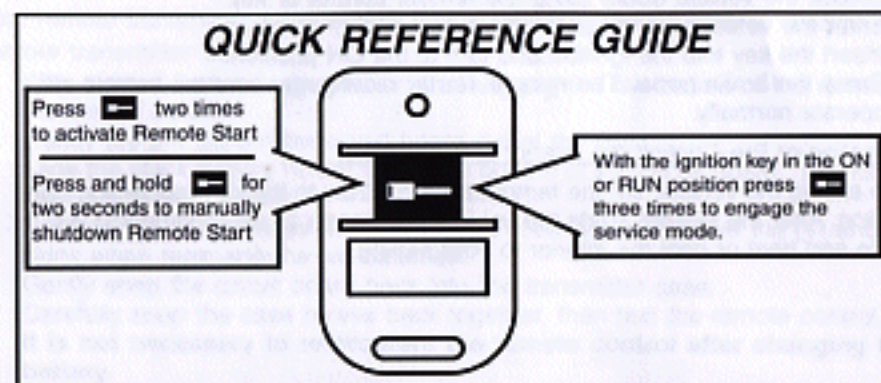

Starting Your Vehicle:

Prior to activating the remote car start feature it is recommended that the doors be locked with the remote control or door lock trim switch. The remote control start function is activated by pressing the button two times within 3 seconds on the Mopar remote control transmitter. The system will check the vehicle to ensure that it is safe to start, and if all safety parameters are correct, the engine will start within 5 seconds (diesel engines vehicle take 30 seconds, to allow the glowplugs sufficient time in all conditions to heat up) Press and hold the button again to turn off the vehicle.

If your vehicle stalls or does not start...

If the vehicle stalls or does not start, the system will pause 5 seconds, then try 3 more times to start the vehicle (a total of four attempts). The system pauses 5 seconds between each start attempt. If the vehicle does not start after the fourth attempt, the system will abort the start process.

Remote Start Safety Features:

For safety and security reasons, the system will shut down the engine during remote start operation if any of the following occur:

- The brake pedal is pressed before the vehicle ignition key is turned on
- The engine reaches 3 times its normal idle speed

As a safety precaution, the vehicle will shut off if left unattended for 10 minutes.

As a safety precaution, the vehicle will only remote start 8 consecutive times (if activated), unless the ignition key is used to run the vehicle. The system will signify that the 8 start limit has been met, by flashing the lights and sounding the horn 8 times. If this occurs, simply start the vehicle with the key to reset.

* "Press" refers to pushing a transmitter button for approximately one second.

Using the Remote Control Start Function (Con't)

Entering the Vehicle While it is Running via Remote Start:

1. Unlock the vehicle doors using the remote control or key.
2. Enter the vehicle. Do not press the brake pedal.
3. Insert the key into the ignition and turn to the ON position.
4. Press the brake pedal. The remote starter disengages and the vehicle will operate normally.

Pre-Heating or Pre-Cooling the Interior of the Vehicle:

Before exiting the vehicle, set the temperature controls to the desired setting and operation. After the system starts the vehicle, the heater or air-conditioning will activate and heat or cool the interior to your setting.

Service Mode:

In service mode, the remote start function is temporarily disabled to prevent the system from unexpectedly starting the engine while being serviced.

To engage the service mode, turn the ignition key to the ON or RUN position and press and release the  button on the Mopar remote control transmitter three (3) times. The system will pause for one second and the honk the horn three (3) times indicating that the system is in Service mode. When attempting to activate the remote start system while in service mode, the horn will honk three (3) times and will not start.

To disengage the service mode, turn the ignition key to the ON or RUN position and press and release the  button on the Mopar remote control transmitter three (3) times. The system will pause for one second and the honk the horn one (1) time indicating that the system has exited service mode.


Important Note: When taking your vehicle in for service, it is recommended that you inform the service personnel that your vehicle is equipped with a remote control start system.

System Maintenance

Changing the Remote Control Battery: Mopar part # 05140773AA (2 required):

The two 3-volt lithium batteries (CR-1220) supplied in your remote control should last approximately one year, depending on usage. When the batteries begin to weaken, you will notice a decrease in range (the distance from your vehicle that your remote transmitter will operate). Follow the instructions below to change the remote transmitter battery.

1. With a small flathead screwdriver, carefully pry the two halves of the remote transmitter apart.
 2. Gently pry the transmitter circuit board out of the case.
 3. Slide the black battery holder out of the bottom of the circuit board. Do not lose the black battery holder.
 4. Remove the old batteries and replace with new ones. Observe the (+) and (-) signs when removing the old batteries.
 5. Gently snap the circuit board back into the transmitter case.
 6. Carefully snap the case halves back together, then test the remote control.
- It is not necessary to re-program the remote control after changing the battery.**

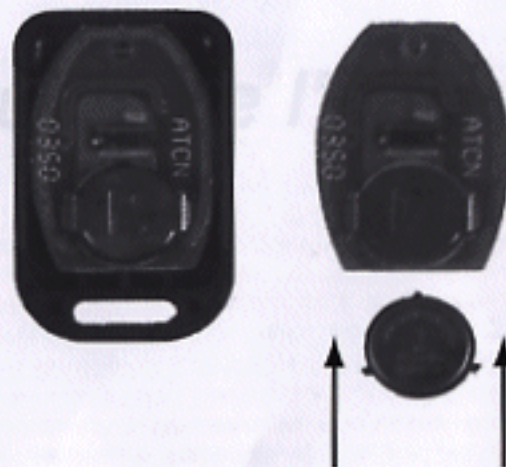

Warranty

When installed on a DaimlerChrysler Corporation Vehicle that is within the New Vehicle Limited Warranty period, Mopar Accessories are covered by either the 3-year / 36,000-mile New Vehicle Limited Warranty, or the 12-month / 12,000-mile Mopar Basic Limited Warranty, whichever is more favorable to you. This warranty is backed by thousands of DaimlerChrysler Motors Corporation dealerships throughout the country. See your dealer for full details and a copy of the limited warranties.

Chrysler 300C & Dodge Magnum

Operator's Addendum

Important Customer Information

Auto Headlamp Feature

In order to activate your automatic headlamp option (if vehicle is equipped) when using remote start, follow the procedure below.

1. Remote start the vehicle.
2. Insert key and turn to the "run" position (clockwise).
3. Press brake pedal.
4. Turn ignition key again, this time as if starting the engine, and release.
5. Auto headlamp option is now operational.

 
"RKE Battery Low" Message

Vehicle owners may get a message on their instrument cluster stating "RKE Battery Low", when the car is started via remote start. This message can appear whenever you start the vehicle with a valet key or remote start. The message will be cleared the next time the vehicle is started with the factory Remote Keyless Entry key.





**Remote Control
Car Starter System**

**Démarreur à
distance de
véhicule**



**Remote Start
Activation**

 **Activation du
démarreur à
distance**

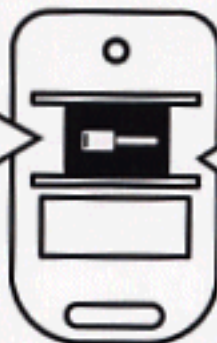

**Remote Start
Shutdown**

**Arrêt du
démarreur à
distance**

Service Mode - Prevents activation

To Enter Service Mode:

1. Turn key to RUN.
2. Press  button 3 X.
3. The parking lights/horn pulse 3 X.

To Exit Service Mode:

1. Turn key to RUN.
2. Press  button 3 X.
3. The parking lights/horn pulse 1 X.

Mode service - Empêche l'activation

Pour accéder au mode service:

1. Tournez la clé en position "RUN".
2. Pressez  la touche 3 fois.
3. Les feux de position clignotent/
le klaxon retentit 3 fois.

Pour quitter le mode service:

1. Tournez la clé en position "RUN".
2. Pressez  la touche 3 fois.
3. Les feux de position clignotent/
le klaxon retentit 1 fois.

Call 1-800-34-MOPAR for Assistance.

Appellez le 1-800-34-MOPAR pour toute demande d'assistance.