

04 - Vehicle Quick Reference / Maintenance Schedules / Description

MAINTENANCE SCHEDULE - MIDDLE EAST

FCA International Operations LLC recommends that you return to the dealer from whom you bought your vehicle for all maintenance service both during and after the warranty periods. Returning to your selling dealer will help ensure that all your service needs are met and that you're completely satisfied. Authorized Repairer's technicians are specifically trained to proficiently perform maintenance and repair procedures on your FCA International Operations LLC vehicle.

Authorized Repairers will help ensure that all your service needs are met and that you are completely satisfied. FCA International Operations LLC strongly recommends you use genuine FCA International Operations LLC / MOPAR parts to maintain your vehicle.

OIL CHANGE INDICATOR - RESET

The vehicle is equipped with an engine oil change indicator system. The "Oil Change Required" message will flash in the EVIC display for approximately 10 seconds after a single chime has sounded to indicate the next scheduled oil change interval. The engine oil change indicator system is duty cycle based, which means the engine oil change interval may fluctuate dependent upon your personal driving style.

Unless reset, this message will continue to display each time you turn the ignition switch to the ON/RUN position. To turn off the message temporarily, press and release the Menu button. To reset the oil change indicator system (after performing the scheduled maintenance) perform the following procedure:

1. Turn the ignition switch to the "ON" position (Do not start the engine).
2. Fully depress the accelerator pedal slowly three times within 10 seconds.
3. Turn the ignition switch to the "LOCK" position.

NOTE: If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary repeat this procedure.

Required Maintenance Intervals

Perform Maintenance Every			Maintenance Items
(Where time and mileage are listed, follow the interval that occurs first.)			
Miles	Kilometers	Months	
6000	10000	6	▪ Change the engine oil and engine oil filter. ▪ Rotate the tires. ▪ Check the coolant level, hoses and clamps ▪ Inspect exhaust system ▪ Inspect brake hoses ▪ Check spare tire for proper pressure & correct stowage
12000	20000	12	▪ Change the engine oil and engine oil filter. ▪ Rotate the tires. ▪ Check the coolant level, hoses and clamps ▪ Inspect exhaust system ▪ Inspect brake hoses ▪ Check spare tire for proper pressure & correct stowage ▪ Replace the air conditioning filter ▪ Replace the engine air filter
18000	30000	18	▪ Change the engine oil and engine oil filter. ▪ Rotate the tires, rotate at the first sign of irregular wear. ▪ Check the coolant level, hoses and clamps ▪ Inspect exhaust system

			- Inspect brake hoses - Check spare tire for proper pressure & correct stowage
24000	40000	24	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses - Check spare tire for proper pressure & correct stowage - Replace the air conditioning filter - Inspect front & rear axle oil, change if using your vehicle for police, taxi, fleet, off-road, or frequent trailer towing - Replace the engine air filter
30000	50000	30	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses - Check spare tire for proper pressure & correct stowage - Inspect engine air filter element, replace if necessary - Replace Spark Plugs
36000	60000	36	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses and brake linings - Check spare tire for proper pressure & correct stowage - Replace the air conditioning filter - Replace the engine air filter
42000	70000	42	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses - Check spare tire for proper pressure & correct stowage
48000	80000	48	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses - Check spare tire for proper pressure & correct stowage - Inspect the PVC valve and replace if necessary** Recommended - Replace the air conditioning filter - Inspect front & rear axle oil, change if using your vehicle for police, taxi, fleet, off-road, or frequent trailer towing - Replace the engine air filter
54000	90000	54	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses and linings - Check spare tire for proper pressure & correct stowage
60000	100000	60	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses - Check spare tire for proper pressure & correct stowage - Inspect the engine air filter element, replace if necessary - Replace the air conditioning filter - Inspect the PVC valve and replace if necessary** Recommended - Replace spark plugs

			- Inspect engine accessory drive belt, replace if necessary*** This maintenance is not required if belt was previously replaced - Drain transfer case & refill - Flush & replace engine coolant/anti-freeze - Replace the engine air filter
66000	110000	66	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses - Check spare tire for proper pressure & correct stowage
72000	120000	72	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses - Check spare tire for proper pressure & correct stowage - Replace the air conditioning filter - Inspect front & rear axle oil, change if using your vehicle for police, taxi, fleet, off-road, or frequent trailer towing - Replace the engine air filter
78000	130000	78	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses - Check spare tire for proper pressure & correct stowage
84000	140000	84	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses and brake linings - Check spare tire for proper pressure & correct stowage - Replace the air conditioning filter - Replace the engine air filter
90000	150000	90	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses and brake linings - Check spare tire for proper pressure & correct stowage - Inspect the engine air filter element, replace if necessary - Inspect the PVC valve and replace if necessary** Recommended - Replace spark plugs - Inspect engine accessory drive belt, replace if necessary*** This maintenance is not required if belt was previously replaced - Drain transfer case & refill
96000	160000	96	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses - Check spare tire for proper pressure & correct stowage - Replace the air conditioning filter - Inspect front & rear axle oil, change if using your vehicle for police, taxi, fleet, off-road, or frequent trailer towing - Replace the engine air filter
102000	170000	102	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses

			- Check spare tire for proper pressure & correct stowage - Flush and replace engine coolant, if not done at 100,000 km
108000	180000	108	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses and brake linings - Check spare tire for proper pressure & correct stowage - Replace the air conditioning filter - Replace the engine air filter
114000	190000	114	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses - Check spare tire for proper pressure & correct stowage
120000	200000	120	- Change the engine oil and engine oil filter. - Rotate the tires. - Check the coolant level, hoses and clamps - Inspect exhaust system - Inspect brake hoses - Check spare tire for proper pressure & correct stowage - Inspect engine air filter element, replace if necessary - Inspect PVC valve, replace if necessary*** Recommended - Replace Spark Plugs - Inspect engine accessory drive belt, replace if necessary**** This maintenance is not required if belt was previously replaced - Drain transfer case & refill - Flush and replace engine coolant, if not done at 100,000 miles - Replace the air conditioning filter - Inspect front & rear axle oil, change if using your vehicle for police, taxi, off-road, or frequent trailer towing - Replace the engine air filter
126000	210000	126	- Change the engine oil and engine oil filter. - Rotate the tires. - Inspect the front & rear axle fluid, change if using vehicle for police, taxi, fleet, off-road, or frequent trailer towing
132000	220000	132	- Change the engine oil and engine oil filter. - Rotate tires - If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary. - Inspect the brake linings, replace if necessary - Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary - Replace the air conditioning filter - Replace the engine air filter
138000	230000	138	- Change the engine oil and engine oil filter. - Rotate the tires.
144000	240000	144	- Change the engine oil and engine oil filter. - Rotate tires - If using your vehicle for any of the following: Dusty or off-road conditions. Inspect the engine air cleaner filter; replace if necessary. - Inspect the brake linings, replace if necessary - Inspect the front & rear axle fluid, change if using vehicle for police, taxi, fleet, off-road, or frequent trailer towing - Inspect exhaust system - Inspect the front suspension, tie rod ends and boot seals for cracks or leaks and all parts for damage, wear, improper looseness or end play; replace if necessary. - Replace the air conditioning filter

			▪ Inspect front & rear axle oil, change if using your vehicle for police, taxi, off-road, or frequent trailer towing ▪ Replace the engine air filter
150000	250000	150	▪ Change the engine oil and engine oil filter. ▪ Rotate the tires. ▪ Replace the engine air cleaner filter. ▪ Change the manual transmission fluid if using your vehicle for any of the following; trailer towing, snow plowing, heavy loading, taxi, police, delivery service (commercial service), off-road, desert operation or more than 50% of your driving is at sustained high speeds during hot weather, above 90° F (32° C) ▪ Inspect the transfer case fluid

WARNING:

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component malfunction and effect vehicle handling and performance. This could cause an accident

Failure to follow these instructions may result in possible serious or fatal injury.